



56K Compact Flash Modem



Owner's Manual
Please read before using this equipment.

Contents

Introduction	3
Connecting Hardware	3
Setting Up an Internet Service Provider Connection	4
Connecting to an ISP	11
Connecting to a Website	13
Using E-mail	15


© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

Introduction

Your RadioShack 56K Compact Flash Modem lets you connect a Microsoft Windows CE-operated Pocket PC (such as the Compaq iPAQ) to the Internet and send and receive e-mail. The modem is light and compact, and conveniently fits in your pocket. The modem is easy to install (using the supplied RJ-11 cable).

Connecting Hardware

1. Firmly insert the compact modem's connector into the slot on top of the Pocket PC. Use the arrow on the label's front end as a guide for proper insertion.
2. Insert the supplied RJ-11 modular cable plug into the modem's modular socket.
3. Insert the modular cable's other end into a standard telephone line outlet.

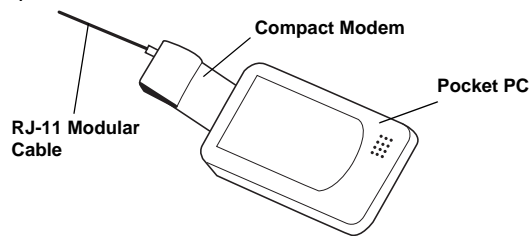

Setting Up an Internet Service Provider Connection

To configure your Internet device for a local ISP (Internet Service Provider), you must enter the following information. You can obtain this information from your existing ISP:

- Dial-in username
- Dial-in password
- E-mail log-in username
- Local access phone number
- Alt DNS (Domain Name Server)
- POP3 (Post Office Protocol) mail host
- SMTP (Simple Mail Transfer Protocol) server


Notes:

- If you use AOL, you can connect to the home page, but not to AOL services or e-mail.
- If you use MSN™, connect to the home page (<http://www.microsoft.com/mobile/pocketpc/stepbystep/msnemail.asp>) to download and install a patch that enables you to connect to MSN services and e-mail. Without the patch, you cannot access MSN services or e-mail.

1. On your Pocket PC, select **Start/Settings**.



The *Settings* screen appears.

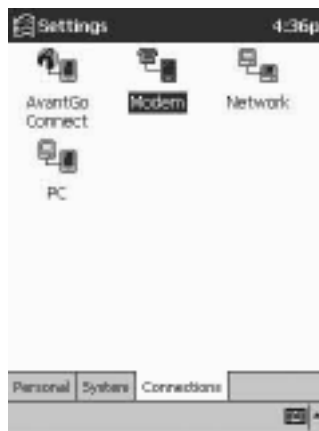

2. Select **Connections**, then select the **Modem** icon. The *Modem Connections* screen appears..



3. Select **New Connection**. The *Make New Connection* screen appears.



4. Enter the name of your ISP (such as AT&T WorldNet) in the *Enter a name for the connection* text box.
5. Select **PRETEC-CompactModem_3.3V_56K** from the *Select a modem* drop-down list.

Note: If this option does not appear in the *Select a modem* drop-down list, be sure that your modem is seated firmly in the Pocket PC's slot.
6. Select **57600** for the *Baud Rate*.
7. Select **Advanced**.
8. Select **TCP/IP**. The *Advanced* screen appears.



9. Be sure **Use server-assigned IP address**, **Use software compression**, and **Use IP header compression** are all selected.
10. Select **Name Servers**. The second *Advanced* screen appears.



11. Select **Use specific server address**.
12. Enter the DNS numbers provided by your ISP in the *DNS* (Domain Name Server) text box.

Note: Most ISPs do not require adjusting server address settings.
13. Enter the DNS numbers provided by your ISP in the *Alt DNS* text box.
14. Leave the *WINS* box set to 0.0.0.0.
15. Leave the *Alt WINS* box set to 0.0.0.0.
16. Click **ok**. You are returned to the *Make New Connection* screen.

17. Select **Next**. The *My Connection* screen appears.

The screenshot shows a mobile device screen with a 'Settings' title bar and a clock showing 3:58p. The main title is 'My Connection'. There are three input fields: 'Country code:' with '44', 'Area code:' with '171', and 'Phone number:' which is empty. Below these fields are three buttons: 'Cancel', 'Back', and 'Next'. At the bottom of the screen is a full QWERTY keyboard.

18. Enter your local ISP access area code and phone number in the *Area code* and *Phone number* text boxes. Check with your local telephone company to make sure that the number you choose is a local number.
19. Select **Next**, then **Finish**.
20. Click **ok**.

CONNECTING TO AN ISP

1. Select **Start/Programs**. The *Connections* screen appears.



2. Select **Connections**, then select the icon for your ISP (in this example the icon is **My Connection**). The *My Connection* screen appears.



3. Enter your name in the *User name* text box.
4. Enter your password in the *Password* text box.
5. Leave the *Domain* text box blank.

Note: If you are dialing into a corporate network, you may need to add information in the *Domain* text box.

6. Select **Save password**.
7. Verify **Phone** is correct. If the phone number is not correct, select **Dialing Options...** and make the necessary changes.
8. Select **Home** or **Work** from the *Dial from* drop-down list.

9. Select **Connect**. The connection status appears. Your pocket PC beeps and a *Connected* dialog box appears when connection is achieved. Select **Hide Status** to hide the *Connected* window.
10. To disconnect your ISP at any time, select **Start/Today** to go to the *Today* screen and select the double computer icon at the bottom of the screen.



11. Select **Disconnect** from the dialog box that appears.

CONNECTING TO A WEBSITE

1. After your Pocket PC is connected to your ISP, select **Start/Internet Explorer**. The *Pocket Internet Explorer* home page appears.



2. Type the desired website address at the top of the screen.

Note: If you do not see the address bar, select **View/Address Bar**.

3. Select **Go** to go to the selected site.

Note: If you are connecting to a Remote Access Server (RAS), you might need to configure a proxy server.

USING E-MAIL

1. After your Pocket PC is connected to your ISP, select **Start/Inbox**. The *Inbox* screen appears.



2. Select **Services/New Service**. The *Service Name* screen appears.



3. Depending on your specific ISP settings, choose **POP3 Mail** or **IMAP4** (Internet Message Access Protocol) **Mail** from the *Service type* drop-down list.

Note: IMAP4 mail is typically used in a corporate environment, while POP3 mail is more frequently used by ISPs.

4. Leave *Service name* set to its accompanying default.

5. Select **Next**. The *Service (1/4)* screen appears..

Inbox 4:25p

POP3 Service (1/4)

Connections:

My Connection

Server:

User ID: Password:

☐ Save password

Cancel Back Next

123 1 2 3 4 5 6 7 8 9 0 = - *
Tab q w e r t y u i o p []
CAP a s d f g h j k l ; ' "
Shift z x c v b n m , . / + =
Ctrl Alt ^ \ _ + - = >
Edit X

6. Select or type the name of your ISP in the *Connection* drop-down list.
7. Type the name of your POP3 or IMAP4 server in the *Server* text box.
8. Type your e-mail log-in username provided by your ISP in the *User ID* text box.
9. Type your e-mail log-in password provided by your ISP in the *Password* text box.

Note: The e-mail log-in and dial-in username/password are usually the same. However, some ISPs require a different username/password for dial-in and e-mail.

10. Select **Save Password**.
11. Select **Next**. The *Service (2/4)* screen appears.

12. Leave the *Domain* text box blank.

Note: If you are connecting with RAS, *Domain* is usually populated.
13. Type the name of your SMTP host provided by your ISP in the *SMTP host for sending mail* box. For example, with AT&T WorldNet, SMTP host is **mailhost.worldnet.att.net**.

Note: The POP3 and SMTP hosts may be the same or different depending on the ISP.
14. Type your e-mail address in the **Return address** box.

15. Select **Next**, then select **Next** again. The *Service (4/4)* screen appears.
16. Select **Get message headers only** or **Get full copy of messages** from the drop-down list at the top of the screen.
17. Select **Receive meeting requests** or **Select file attachments**.
18. Select **Finish**.
19. Click **ok**.
20. Select **Services/Connect** to send and receive e-mail.



Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

25-928
06A01
Printed in Taiwan